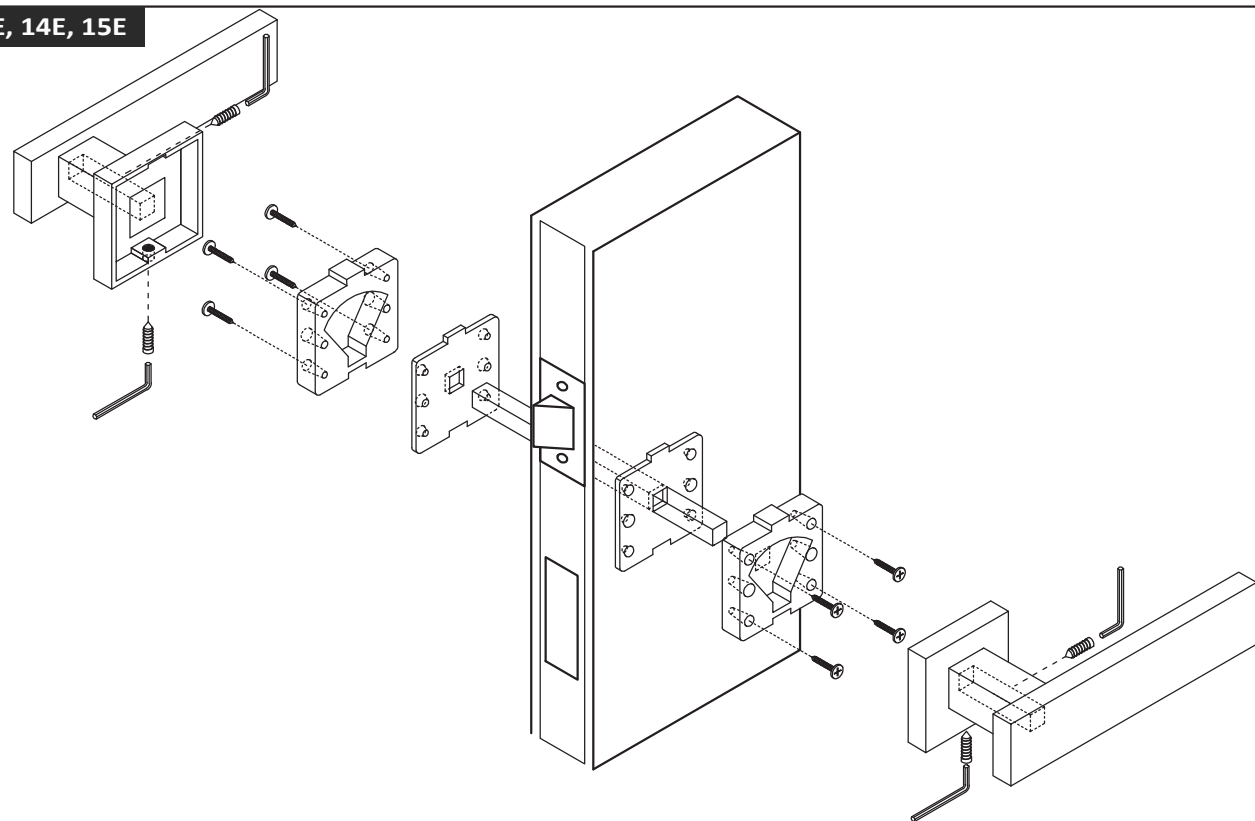# ORO & ORO

ORO & ORO

13E, 14E, 15E

1 General Scheme of Mounting the Handles using a Template (Sticker)
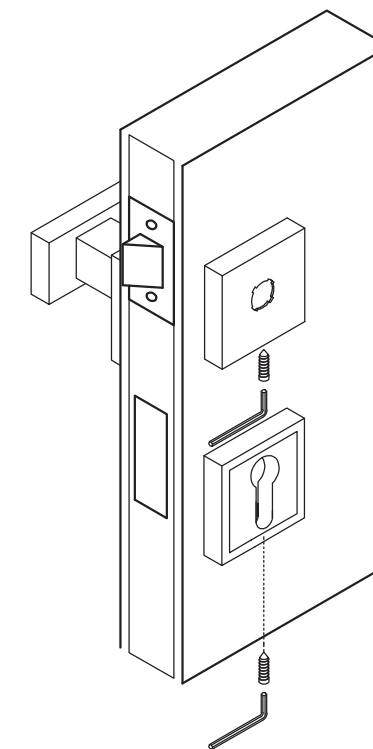
2 After installing the lock, fix the template on the door and mark the location for the screws. Drill the holes of the screws and remove the sticker.
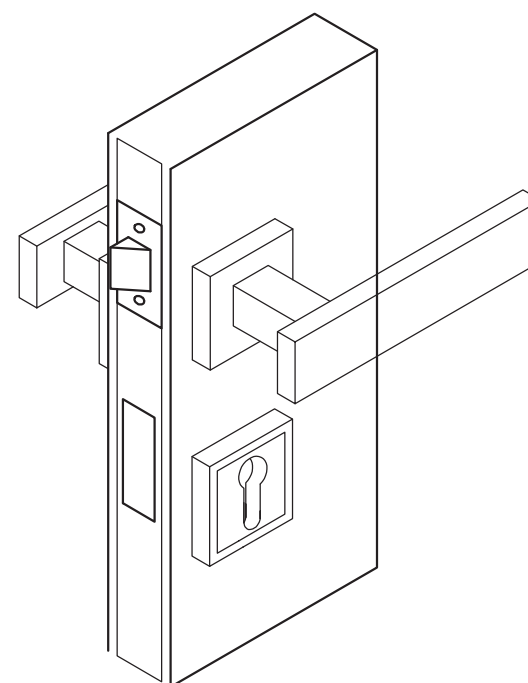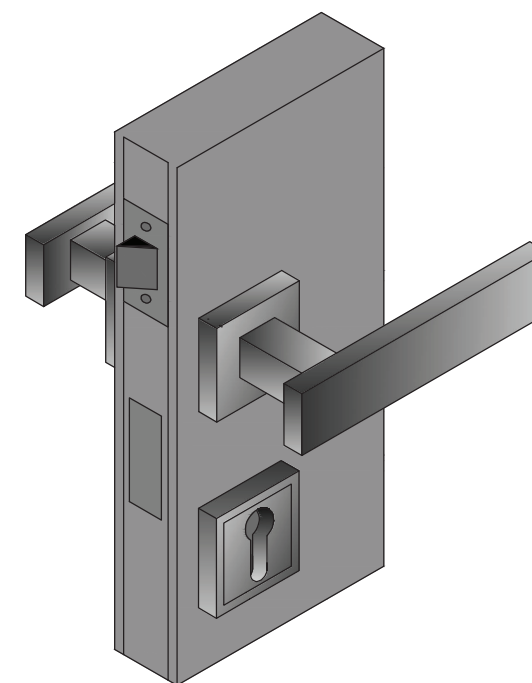

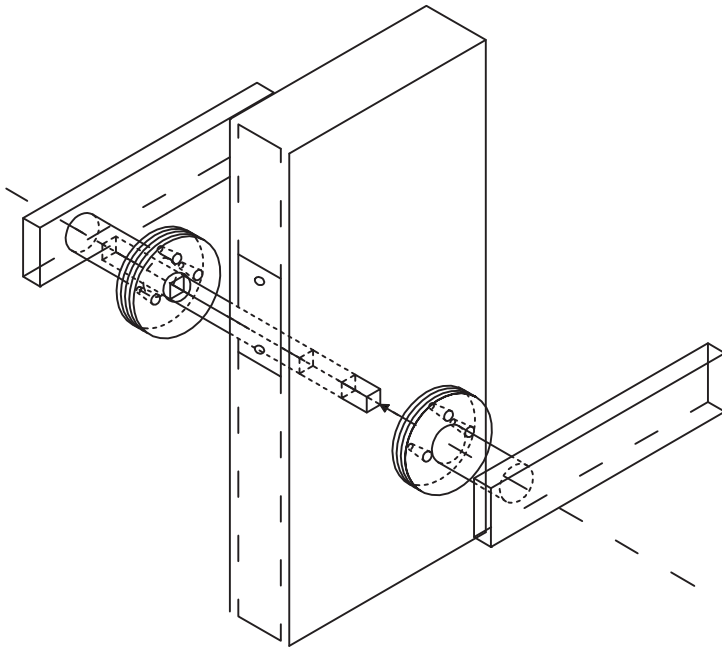**3** Install the inner part of the rose and fix it with screws
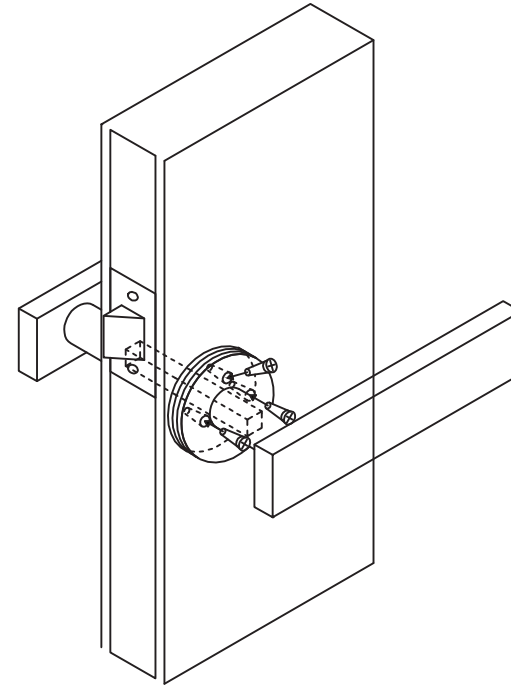

4 Fix the handle and the key escutcheon cover.

5 Tighten the Allen screws using the Allen keys.

6 Fix the other handle.

7 The handle is ready to use.
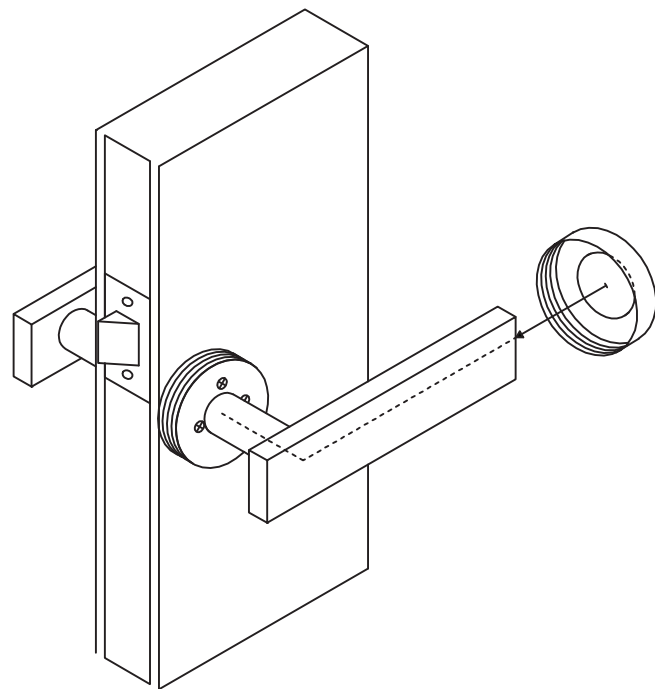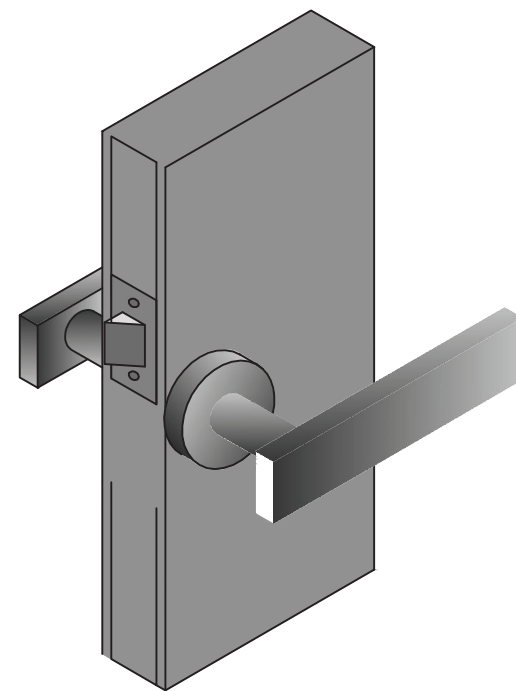
ORO & ORO

16E

1   Fix the handle and the key escutcheon.
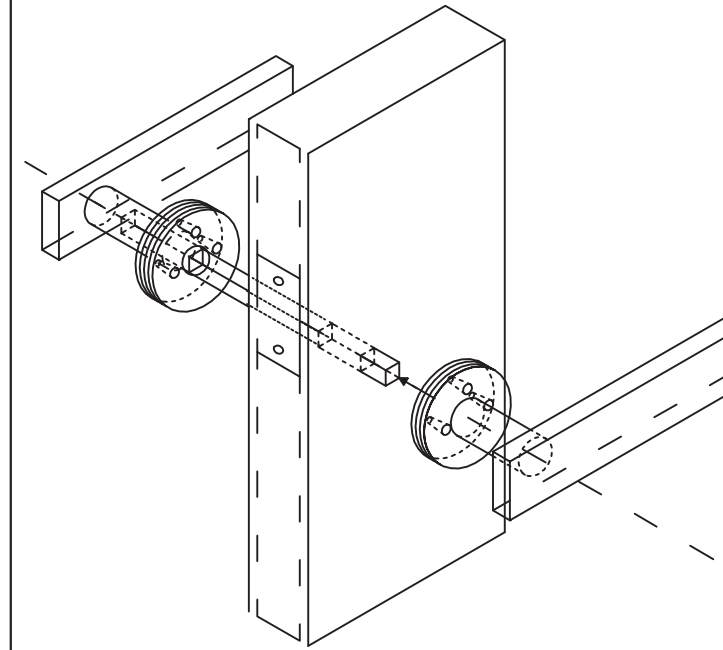

2   Tighten the Allen screws using the Allen keys.

3   Insert the key escutcheon cover.
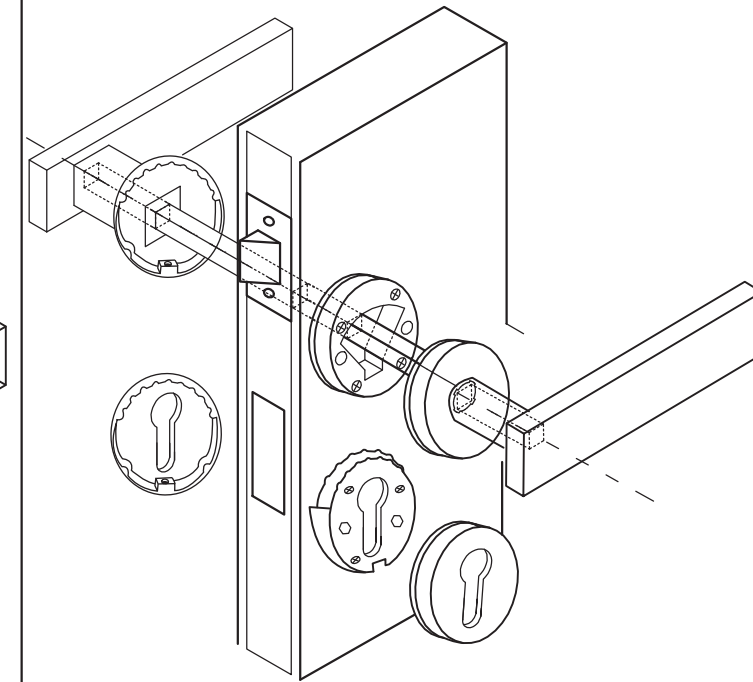

4   The handle is ready to use.
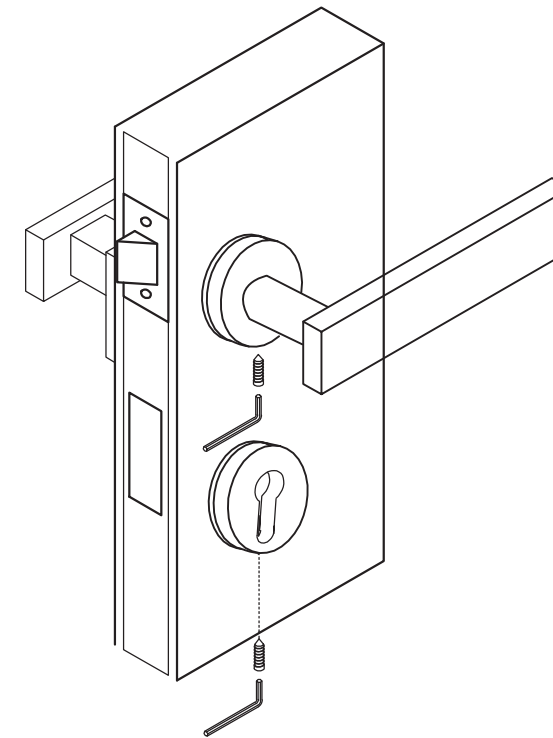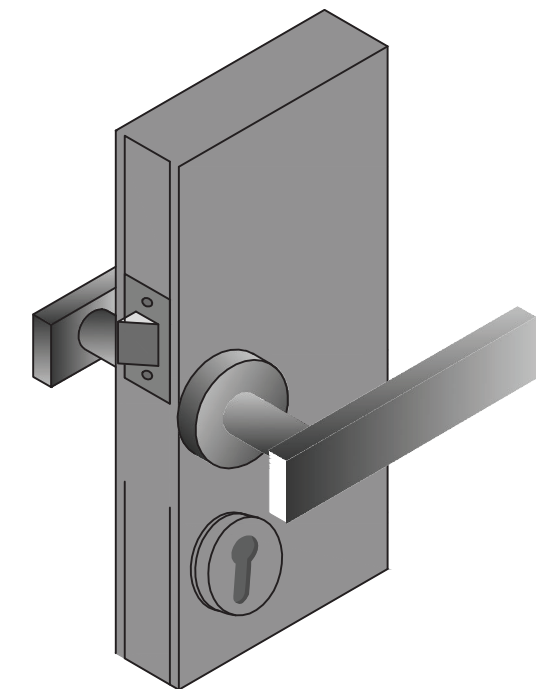
17E

1   Install the inner part of the rose & fix it with screws.

2   Fix the handle & the key escutcheon.

3   Tighten the Allen screws using the Allen keys.

4   The handle is ready to use.